



The axle bolt has a hole for grease to be applied to the center of the wheel. To allow grease to exit the bolt, the hole must be positioned up, as shown in the picture. If the hole is down, the wheel puts too much pressure against the hole to allow grease to come out.

