




Remote Control Transmitter Programming

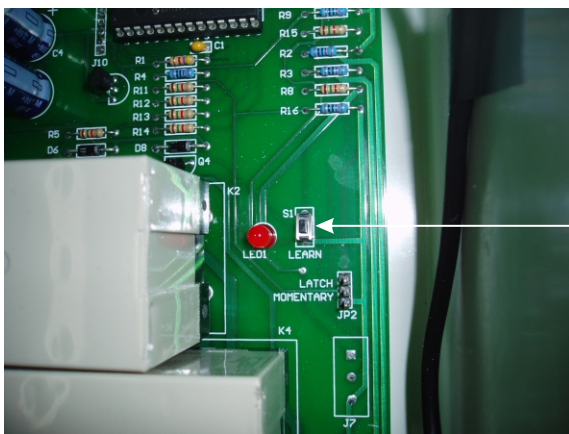

Button 1

Program Switch
(Learn)



Locate the program switch under the access panel on the front of the Aqua-matic as shown above.

You may want to use a pencil to push the learn button. It makes it easier and there are live components inside the case.

Press and hold the S1 (learn) button for 10-15 seconds. The LED light will come on when the button is pressed, and go out after the 10-15 seconds. This clears the memory of all existing remote transmitter codes. This step is recommended if you are having trouble programming your new remote transmitter or multiple transmitters to your remote unit.

Please read through the steps before you begin.

You have 10 seconds to complete the program sequence.

1. Push the program switch (SW1) until the red program LED lights solid, then release.
2. Now push Button 1 on the new transmitter until the program LED goes out.
3. Now push Button 1 again, the program LED should flash slowly... Hold Button 1 for 3-4 seconds.
4. Your new remote is now programmed.

Note: if the new remote does not work, make sure that the indicator LED on the transmitter is flashing and that the battery is good. Then repeat steps 1 through 4.