

Figure 1

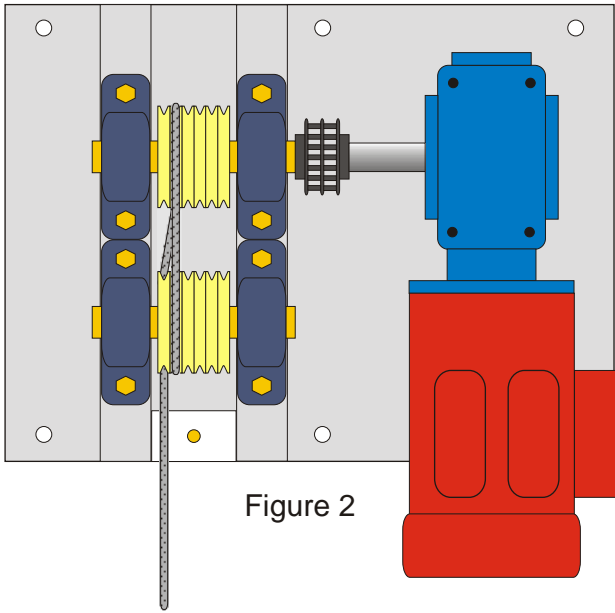


Figure 2


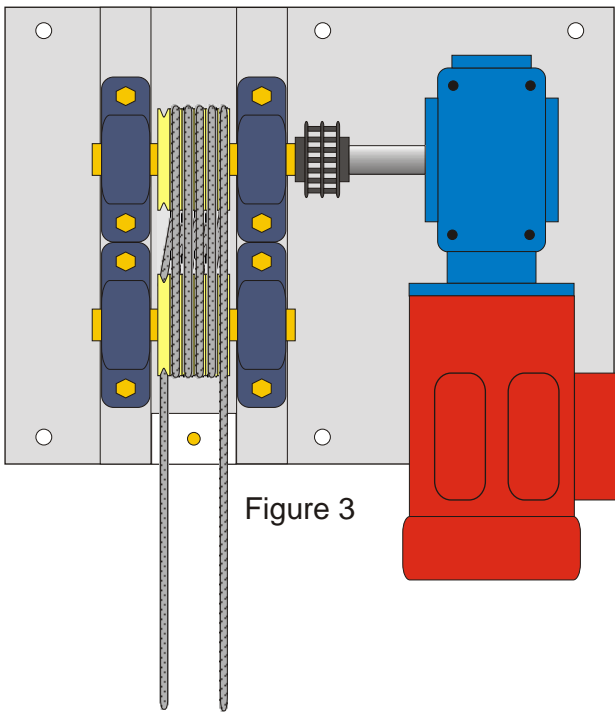


Figure 3



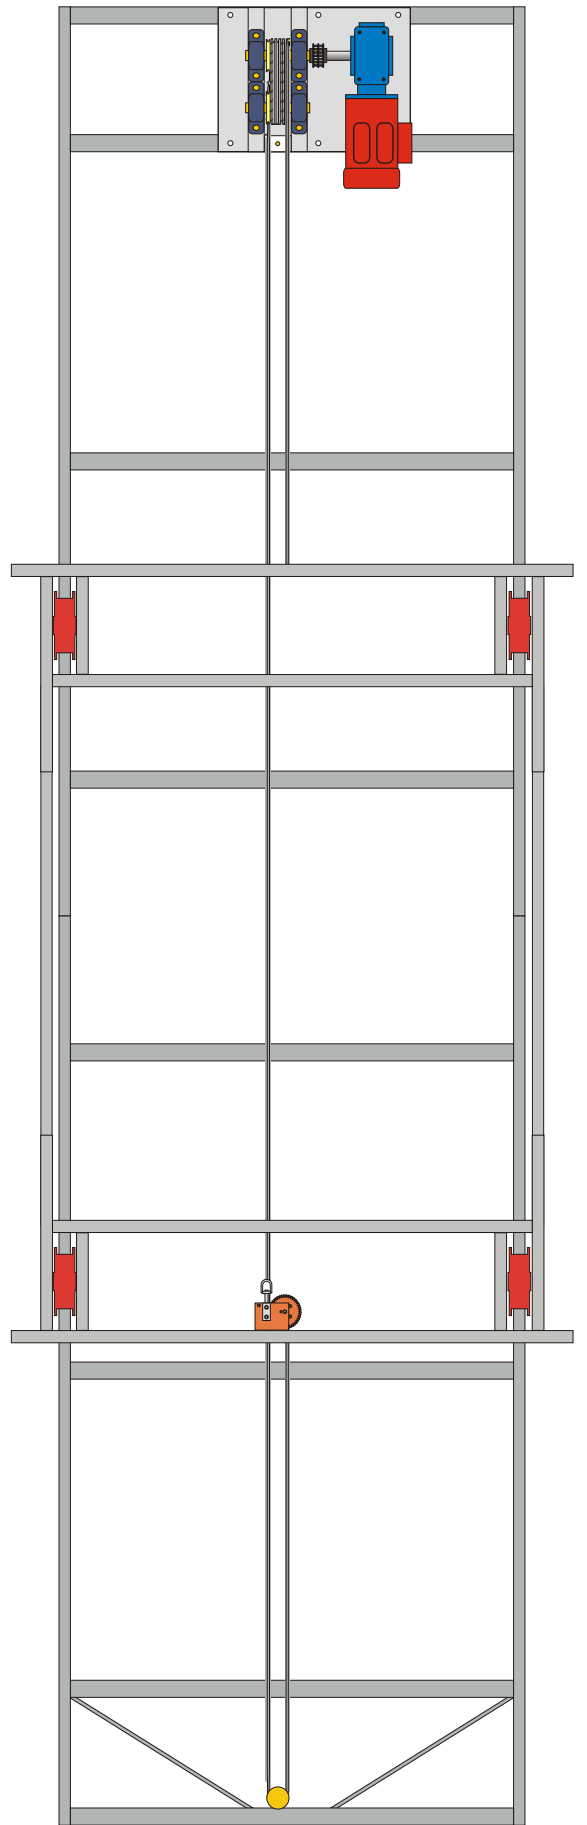

# *Shore Tracker*<sup>®</sup>

## Cable Installation

As you face the lake, take the cable end coming off the right hand side of the pulley and run it under the carriage to the winch. Be sure you have the correct cable end so the cable is not crossing itself.

Facing the winch (your back to the lake), thread the cable under the far left groove of the front sheave (figure 1). Then under the second groove of the rear sheave, over the top to the second groove of the front sheave (figure 2), under to the third groove of the rear sheave, and so on until all the grooves are filled (figure 3). Notice that the cable is straight across the top of the sheaves and angled across the bottom.

Attach the cable end coming off the winch to the eye-bolt on the front of the carriage using 2 cable clamps.

Attach the cable end from the lake end pulley to the tension winch at the rear of the carriage. Refer to the tension winch instructions for proper installation.

At this point, cable installation is completed, however, be aware that the first few times you use your system, the cable will stretch slightly. Keep a close eye on this and tighten as needed. If you notice lurching and jerking as you lower the carriage, it is probably due to a loose cable and, or the wheels on the carriage need lubrication.